

WASH SAFE ROOF WASH

DESCRIPTION:

Wash Safe Roof Wash is a roof cleaning solution used to remove moss, black algae, mold, lichen, or any fungus that may grow on roofs. Wash Safe Roof Wash is highly effective on roof materials.

Wash Safe Roof Wash does not alter roof colors and will not damage lawns or plants due to run-off. It has an active life of 4 to 6 hours, after which the product biodegrades.

ORDERING:

Approximate coverage rate is 1,000 square feet per 1 pound of Wash Safe Roof Wash.

- 40-pound pail (Item #701455)

STORAGE AND HANDLING:

Always store closed containers in cool, ventilated and dry locations away from heat and oxidizing agents. Do not store in direct sunlight.

PRECAUTIONS:

- Read Safety Data Sheets (SDS) prior to using.
- Wear proper personal protective equipment, such as gloves and eye protection, per the SDS.
- **Keep away from children.**
- Wash Safe Roof Wash is harmful to aquatic life. Do not allow Wash Safe Roof Wash to enter water systems that might contain aquatic life (e.g. ponds, lakes, streams, rivers, etc.).

COVERAGE RATES		
Wash Safe Roof Wash (lb)	Wash Safe Roof Wash and water (gal)	Coverage (ft ²)
3	12	3,000
6	24	6,000
10	40	10,000
40	160	40,000



APPLICATION:

1. Wash Safe Roof Wash is applied using a pump sprayer, or other spraying method.
2. Prior to spraying the roof, mix 1/2 cup Wash Safe Roof Wash per every gallon of water used. Mix the solution well, stirring frequently, and allow the solution to activate for 15 minutes prior to use.
3. Apply Wash Safe Roof Wash solution at coverage rates shown in the table to the left.
4. Rinsing methods
 - a. Leave Wash Safe Roof Wash solution on the roof and allow the next rain to rinse it off.
 - b. Rinse using a pressure washer at low pressure (1,000 psi, maximum) and with a fan tip nozzle. Keep the nozzle at least 12 inches from the roof surface.
 - c. Rinse using a hose and soft-bristle scrubber.
5. If necessary, allow sixty (60) days to pass before repeat use.